 


Important Safety Instructions

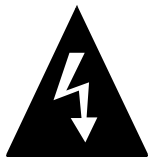

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN!**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USE-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OF MOISTURE.

POWER SUPPLY:

Connect the supplied adapter to the side of the unit in the slot marked “DC 5V IN”. Plug the two-prong end of the power cord into the cigarette lighter socket of the vehicle. If you have difficulty inserting the plug, turn it over and reinsert it. If the unit will not be used for a long time, disconnect the plug from the socket.

NOTE:

Before plugging the power cord into a cigarette lighter socket of vehicle, make sure that all the connections have been made.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer to service manual for servicing instructions. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Important Safety Instructions

NOTES

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a damp cloth.
- 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



Important Safety Instructions

Warning

Failure to avoid the following potentially hazardous situations may result in injury or property damage.

The unit is designed to provide you with route suggestions. It does not reflect road closures or road conditions, traffic congestion, weather conditions, or other factors that may affect safety or timing while driving.

Use the unit only as a navigational aid. Do not attempt to use the unit for any purpose requiring precise measurement of direction, distance, location, or topography. This product should not be used to determine ground proximity for aircraft navigation.









This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The images in this manual are only for reference and they may be different from the actual ones.

Accessories

Accessories List

| ITEM | NAME | QTY |
|---|----------------------|-----|
|  | Owner's Manual | 2 |
|  | Car Adaptor | 1 |
|  | Mounting Bracket | 1 |
|  | USB Cable | 1 |
|  | Mounting cradle | 1 |
|  | Touch Pen | 1 |
|  | Dashboard mount disk | 1 |
|  | Pouch | 1 |

NOTE

Accessories and their parts numbers are subject to modification without prior notice due to improvements.


Contents

| | |
|--------------------------------------|---------|
| Important Safety Instructions |1 |
| Accessories |4 |
| View of Main Unit |6 |
| System Connections |7 |
| Power Supply Preparation |9 |
| General Setup |10 |
| Playing Music |14 |
| Photo Viewer |16 |
| Use of the Mount Accessories |18 |
| Troubleshooting |19 |
| Specifications |20 |

View of Main Unit



 - 1. POWER button**
Press for a longer time to enter or exit the standby mode.
- 2. Card Port**
Insert the SD card into the port.
- 3. Earphone Jack**
Used to connect earphones for private listening. When the earphones are connected to this jack, the speaker will be turned off automatically.
- 4. DC 5V Input Jack**
Used to connect to the supplied car adapter.
- 5. LCD Screen**
- 6. USB port**
Used to connect to the USB device.
- 7. RESET button**
Press to reset the system.

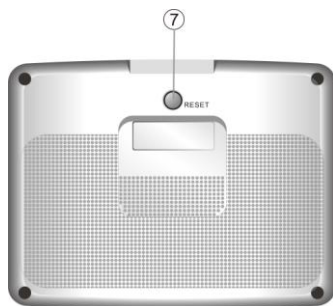

System Connections

- Always ensure that the unit and any other external device connected to the unit are switched off and unplugged from the power supply before you attempt to connect the unit to any external device.

Connecting to PC

The unit is designed with a USB port which allows you to connect the unit to PC for map updating. See the below figure for details:



System requirements:

- Windows 98SE, ME, 2000 and XP
(Driver required for Windows 98SE)
- DVD Rom Drive (for map upgrade purposes)
- Intel Pentium II 233 Mhz
- 64 MB RAM
- 50 MB available hard drive space
- Available serial port and/or USB Port
- 256-color display adapter and monitor
(16 bit color required)

In the near future map updates will be available for down load from our website. Please check www.nextar.com periodically for the information on downloads.

System Connections

Inserting SD Card

The unit is designed with SD Card jack which allows you to insert the SD/MMC card into the unit as shown below:



Connecting to Earphones

Connect the earphones to the right side of the unit for private listening.



When earphone is connected, the speakers will automatically turn off.

Note: Excessively loud volume could damage your hearing. So turn down the volume before you connect the earphones, and then raise the volume to comfortable level.

Power Supply Preparation

Using of Car Adaptor

The unit is supplied with a Car Adaptor for powering it while in a vehicle.

Connect the Car Adaptor Power Plug to the unit's power jack and plug the other end to the vehicle's 5V accessory/ cigarette socket, as shown on the right figure.



Attention

- Place the unit in a proper position for viewing.
- Disconnect the unit from the Car Adaptor when starting the vehicle.

Your portable GPS unit comes with a built-in rechargeable battery. Please see details in the following segment.

Working conditions and precautions for the rechargeable battery

- Battery should only be used and charged when temperatures are between 32°-100°F.
- Maintain well-ventilated conditions around the product to avoid overheating. Don't put the product on a bed, sofa or anything that may block ventilation to the product.
- When the battery is weak, an indication menu will appear on the LCD screen and about five minutes later, the player will power OFF automatically.

Charging the Battery Pack

The battery must be charged by using the supplied Car Adaptor.

General Setup

General Setup

When turn on the unit, the screen will display the main menu later as shown below:




In the main menu, there are four items for selecting. Touch the corresponding item to enter.

Tap  to enter navigation mode; tap  to enter the MP3 player; tap  to enter the Photo Viewer; tap  to enter the setting menu.

Setting Menu


In the main menu, tap  to enter the setting menu, the screen will display as below:



In the menu, tap  to return to the main menu.

General Setup

Language

Tap  in the setting menu to enter **Language** setting menu for language selecting, as shown below:



Tap the ◀ ▶ buttons to select language. Then tap ✓ to confirm or tap ✕ to cancel.

Backlight

Tap  in the settings menu to enter **Backlight** setting menu for backlight adjusting, as shown below:



Tap the first group ◀ ▶ buttons to adjust the backlight level.

Tap the second group ▶ buttons to adjust the sleep time. There are 6 choices for sleep time (--/5/10/30/60/120).

--: The system will keep backlight always on and will not enter sleep mode.

5: The system will keep backlight on for 5 minutes and then enter sleep mode.

10: The system will keep backlight on for 10 minutes and then enter sleep mode.

30: The system will keep backlight on for 30 minutes and then enter sleep mode.


60: The system will keep backlight on for 1 hour and then enter sleep mode.

 
120: The system will keep backlight on for 2 hours and then enter sleep mode.


After setting, tap ✓ to confirm or tap ✕ to cancel.

General Setup

Date & Time

Tap  in the settings menu to enter **Date & Time** setting menu for changing to the current time zone, as shown below:

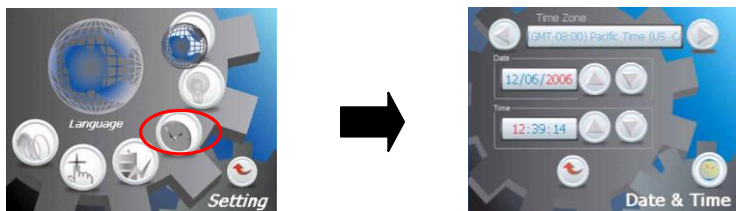

Tap the ◀ ▶ buttons to select the proper Time Zone. Tap the ▲ ▼ buttons of Date group to change the corresponding date and tap the ▲ ▼ buttons of Time group to change the corresponding time. Tap  to return.

Power

Tap  in the settings menu to enter **Power** menu for the current battery status, as shown below:

 


The power menu will display the current battery status. Tap  to return.

General Setup

Calibrate

Tap  in the settings menu to calibrate, the screen will display as below:

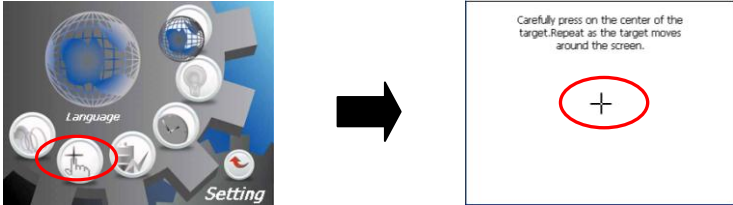

This item is used to calibrate the sensitivity of the touch screen. Tap the center of "+" as it moves around the screen. If you touch the center of "+" every time, it will disappear after having moved through a cycle (center→top left→bottom left→bottom right→top right). Tap the screen to return to the settings menu.

Note: If "+" doesn't disappear, you should calibrate again.

Volume

Tap  in the settings menu to enter **Volume** settings menu for volume adjusting, as shown below:



Tap the ◀ ▶ buttons to adjust the volume. Then tap ✓ to confirm or tap ✗ to cancel.

Playing Music

The unit is designed with SD card slot and supports MP3 and WMA format files playback. You can insert the SD card with MP3 or WMA files in the unit for music enjoyment.

Note: Do not store MP3 or WMA format files in the Flash storage, for the flash storage is used to store map data, any attempt to open the Flash storage may result in the map data missing and lost.

Take the following steps to play:

Loading MP3 format files:

1. Insert the SD card with MP3 files.
2. Turn on the unit.


A note regarding the MP3 function:

The unit has the ability to play your favorite MP3 music files. This is accomplished by using the unit's SD card slot, located on the right side.

- MP3 files should previously reside on the users SD card.
- MP3 files can be imported to the users SD card on a PC, using a variety of programs such as Windows Media Player.
- This process should be performed independent of the navigation unit.

Do not attempt to use the unit to read and burn MP3 files from an external source.


Playing Music.


In the main menu, tap  to enter the playback menu, as shown below:







In the MP3 player, tap  in the top left corner to exit.



Playing Music

 displays the battery status.

Tap  to begin to play the music.

During playback, tap  to pause the playback and the mark will change to , tap it again to resume.


During playback, tap  to stop the playback and tap  to play from the beginning of the track.

During playback, tap  to go to the beginning of the current track; tap  twice to go to the previous track.


During playback, tap  to go to the next track.


During playback, tap  to adjust the volume.

During playback, tap  to select the track time.

Tap  to enter the menu as shown below:



Tap  to activate or close this function. When this function is activated, the player will play the music in random order.

Tap  to cycle through the repeat modes: track, all or off.


Tap  to return to the previous menu.

Photo Viewer

The unit is designed with SD card slot and supports JPEG format files playback. You can insert the SD card with JPEG files in the unit for picture view.

Note: Do not store JPEG format files in the Flash storage, for the flash storage is used to store map data, any attempt to open the Flash storage may result in the map data missing and lost.

Take the following steps to play:


Loading JPEG format files

1. Insert the SD card with JPEG format files.
2. Turn on the unit.

Playing Picture

In the main menu, tap  to enter the Photo Viewer main screen, as shown below:



In the menu, tap  to enter the folder menu, as shown below:


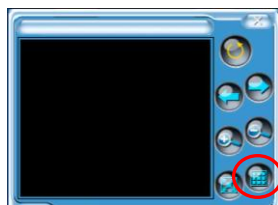 






Photo Viewer

 In the folder menu, double tap the memory card icon to open it, the pictures stored in the memory card will be listed on the screen.

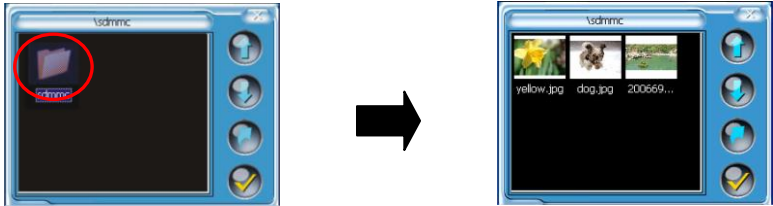




If the pictures list consists of more than one screen, tap the up arrow  for the previous page and the down arrow  for the next page. Tap  to return to previous menu. Tap a picture to select it and tap  to confirm your selection.



In the pictures list, double tap a picture to play it on screen, as shown below.





On the playback screen, the Photo Viewer has following playback features:

Tap  to rotate the picture.

Tap  to back to previous picture; tap  to switch to next picture.

 
Tap ,  to zoom the picture in or out.

Tap  to play the picture in full-screen mode; double tap the screen again to return to Photo Viewer main screen.

Tap  to return to the pictures list.

Use of the Mount Accessories

When using the unit in vehicle, you can use the supplied mount accessories (mount bracket, mount cradle and dashboard mount disk) to mount the unit in the vehicle. Take the following steps to operate:

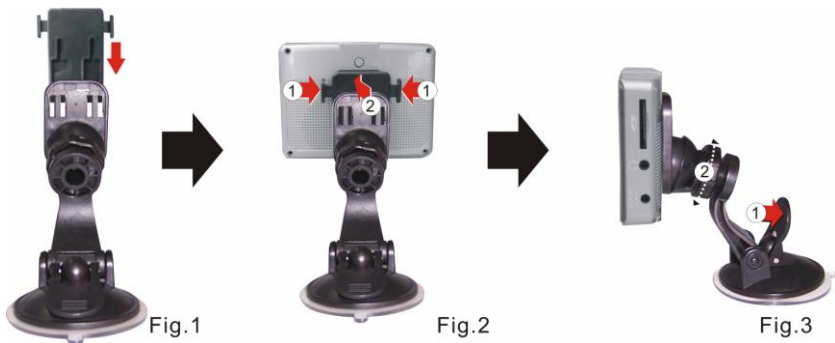

1. See Fig. 1. According to the arrow to slide the mount cradle to fix it to the mount bracket.
2. See Fig. 2. First, set the bottom edge of the unit onto the mount cradle. Then press the two buttons in arrow ① direction and meanwhile push the mount cradle forwards to embed it in the unit.
3. See Fig. 3. Lift the suction cup lever and then press the suction cup to the windshield. According to arrow ① to press down the suction cup lever. Then rotate the knob to adjust the unit to proper position.
To mount to dashboard, use the included adhesive disk. Choose a clean, dry spot on your dashboard, peel off protection liner from the back of the disk, and then attach the disk to your dashboard.

Warning:

When you mount the device in your vehicle, ensure it has a clear line of sight to the sky. The device must not be mounted so that it impairs the driver's view of the road. Please take extra precaution to ensure the airbags are not obstructed by the device.

Troubleshooting

Take these steps described in the tables below to solve simple problems before contacting customer service.

If you suspect something wrong with this unit, immediately turn the power off and disconnect the power connector from the unit. Never try to repair the unit yourself because it is dangerous to do so.

| PROBLEM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|----------------------|------------------------------------|-----------------------------------|
| There is no sound | The volume may be turned down. | Turn up the volume. |
| There is no picture. | The brightness may be turned down. | Adjust the brightness of the LCD. |

Other possibilities:

Static or other external interference may cause the unit function abnormally. In order to recover normal status, please unplug the power supply cord and then plug it into the outlet again to reset the unit. If the problems still exist, please cut off the power supply and consult your service center or the qualified technician.

Specifications

| | |
|----------------------------|----------------------------|
| TFT screen size | 3.5 inches |
| Frequency Response | 20Hz~20kHz |
| Audio Signal-to-noise Rate | $\geq 65\text{dB}$ |
| Audio distortion or noise | $\leq -20\text{dB}$ (1kHz) |
| Channel Separation | $\geq 70\text{dB}$ (1kHz) |
| Dynamic Range | $\geq 80\text{dB}$ (1kHz) |
| Power | DC 5V |
| Power Consumption | < 8W |
| Dimensions | 100mmX76mmX22mm (L*W*D) |
| Weight | About 0.25kg |

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE